

$\underline{\mathsf{NOTE}}$ : HOLES MUST BE DRILLED INTO TOP AND BOTTOM PLATES TO GIVE ACCESS TO CHASES AFTER PANELS ARE SET.

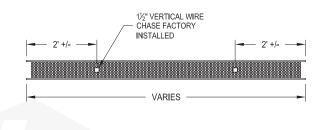

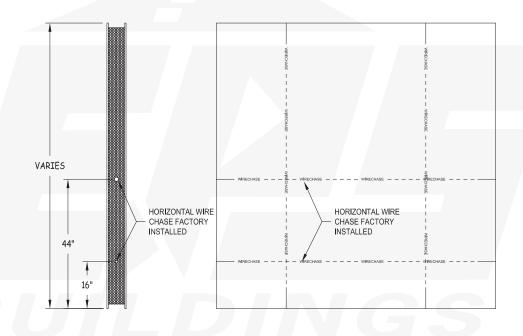



DETAIL: VERTICAL WIRE CHASE ALIGNMENT	
SCALE: N.T.S.	DETAIL#
<u>UPDATED:</u> 1/26/16	WC1
ENERGY PANEL STRUCTURES,102 EAST INDUSTRIAL PARK, GRAETTINGER, IA 51342 PHONE: (712) 859-3219 FAX: (712) 859-3275 WWW.EPSBUILDINGS.COM	

Residential Construction Details Page 89