


NOTE: HOLES MUST BE DRILLED INTO TOP AND BOTTOM PLATES TO GIVE ACCESS TO CHASES AFTER PANELS ARE SET.



NOTE: IF PANELS RUN PAST FLOOR YOU MAY NEED TO MARK THE SILL PLATE FOR LATER REFERENCE

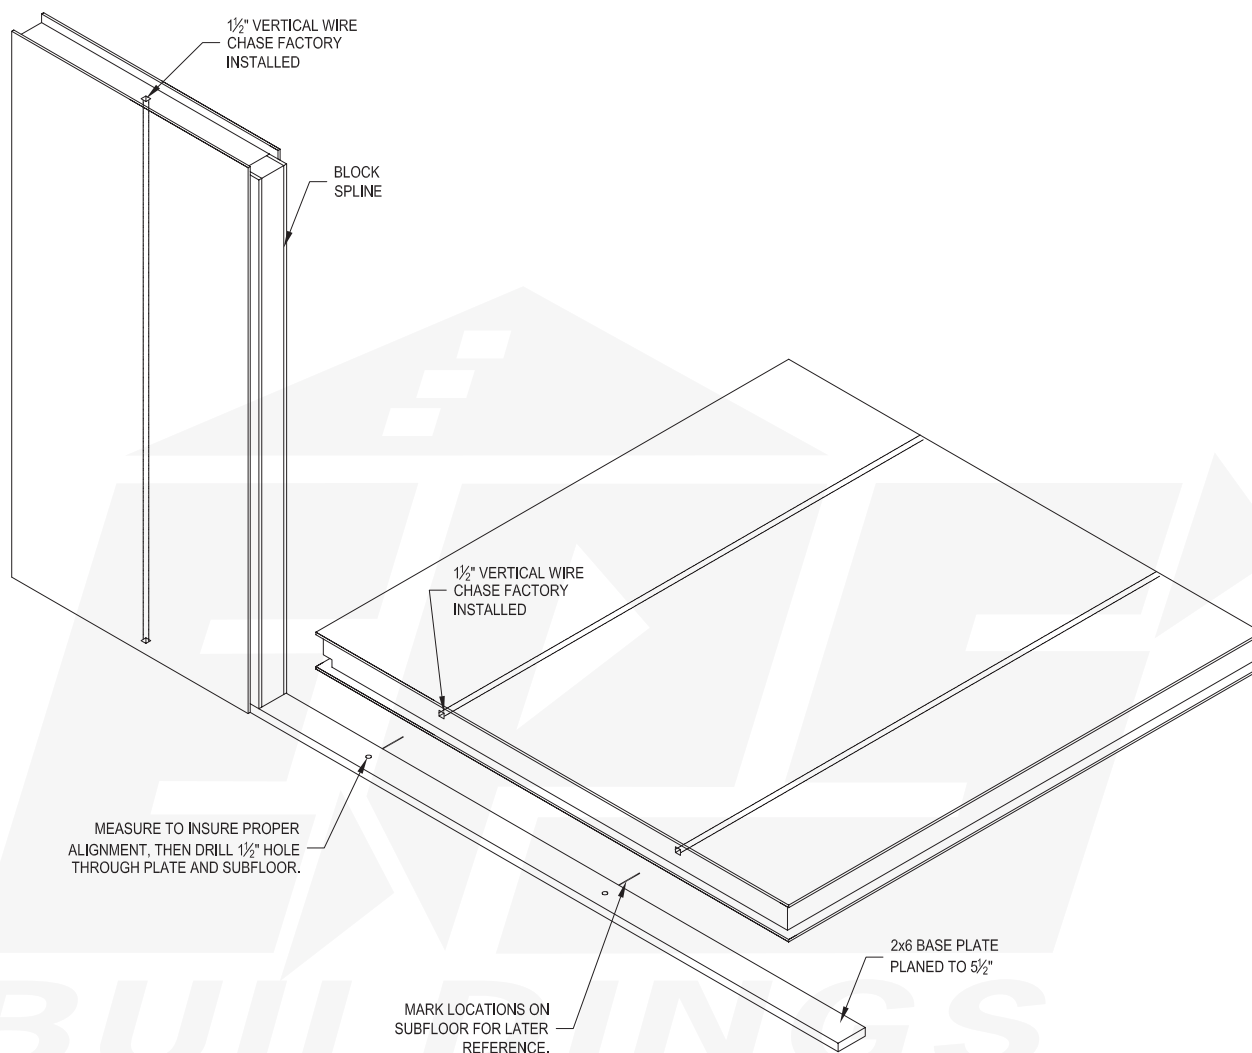

DETAIL: VERTICAL WIRE CHASE ALIGNMENT

SCALE: N.T.S.

UPDATED: 1/26/16

DETAIL#

WC2

ENERGY PANEL STRUCTURES, 102 EAST INDUSTRIAL PARK, GRAETTINGER, IA 51342
PHONE: (712) 859-3219 FAX: (712) 859-3275 WWW.EPSBUILDINGS.COM